

Robin Spikie Mode-1 (27ch)
×8 (可動用なし)

Terbly L-Par-7 (8ch)
×4 (可動用なし)

PAR64
500W Nx53 (可動用なし)

PAR64
500W Mx22 (可動用x6)

PAR64
500W VN x26 (可動用x8)

FQ
500W x11 (可動用x3)
客電除く

2MOLE
300W x8 (可動用x4)

Source Four 436
750W x9 (可動用x3)

LED PARx20 (可動用x4)

可動用 LED
①7363,①8370,①9377,②0384

ストロボx6 (可動用x4)

可動用 ストロボ
③405,④407,⑤409,⑥411

Ayrton Diablo-S (客席)
(Standard add C-451)


ミラーボール

60A/No 100V/60A

D/No 200V/20A

4PN 4ポートノード


球の種類
Fader番号
色

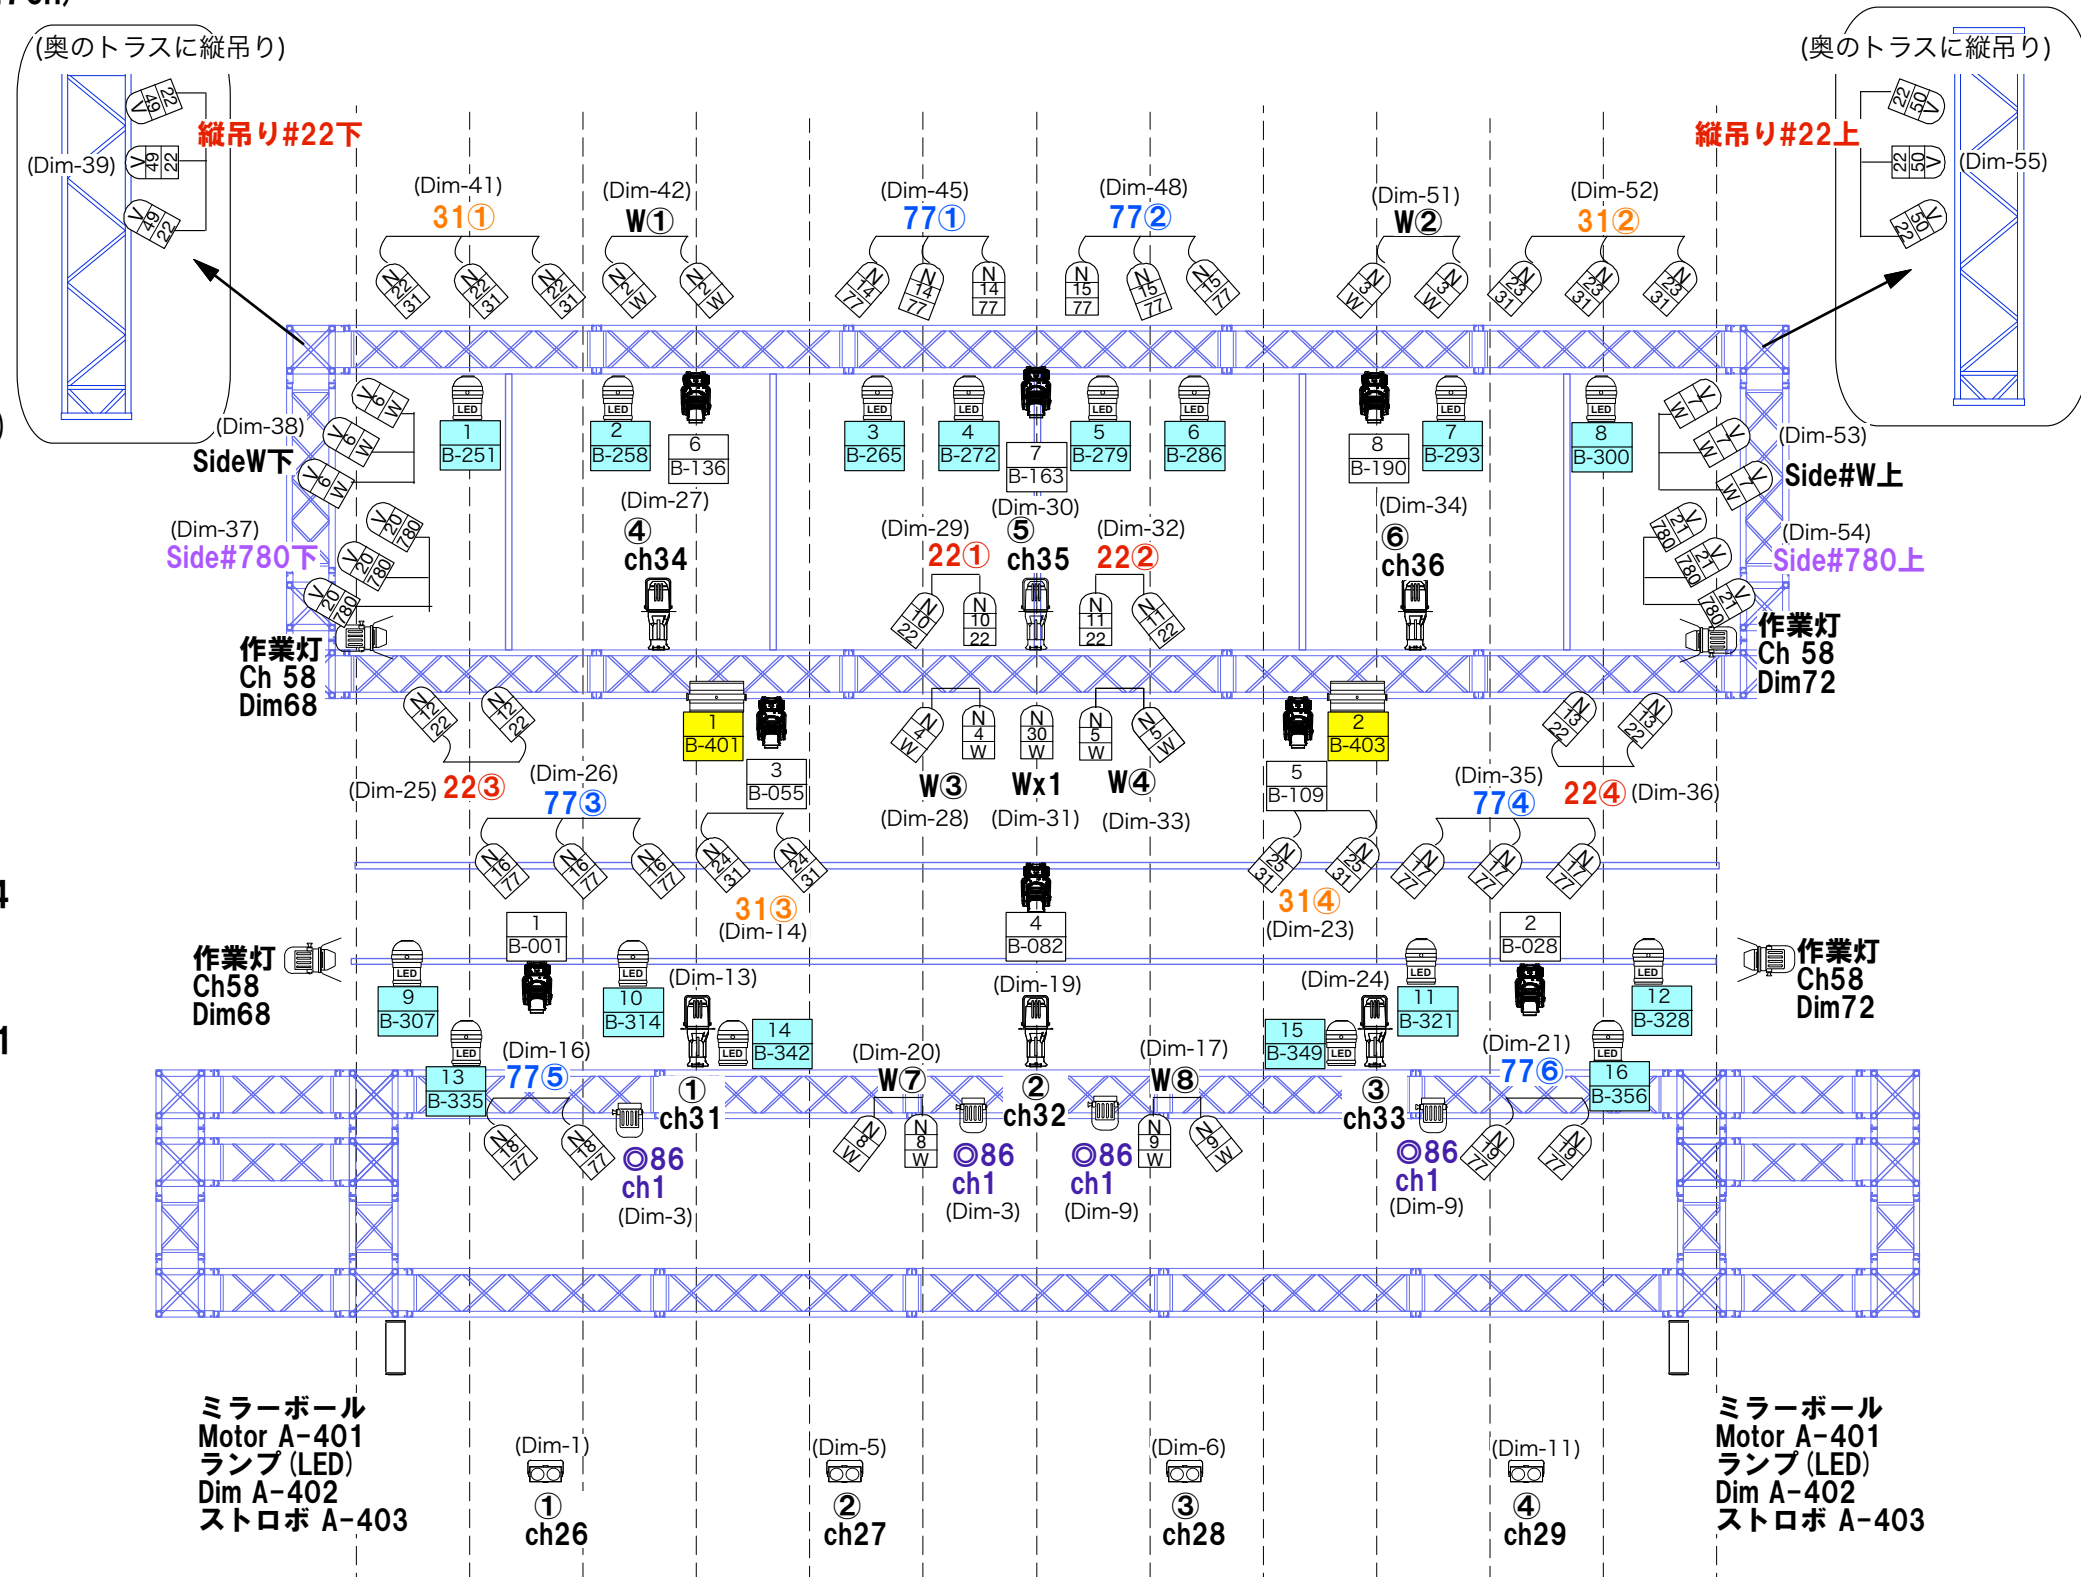

新宿BLAZE

2021年 10月2日 現在



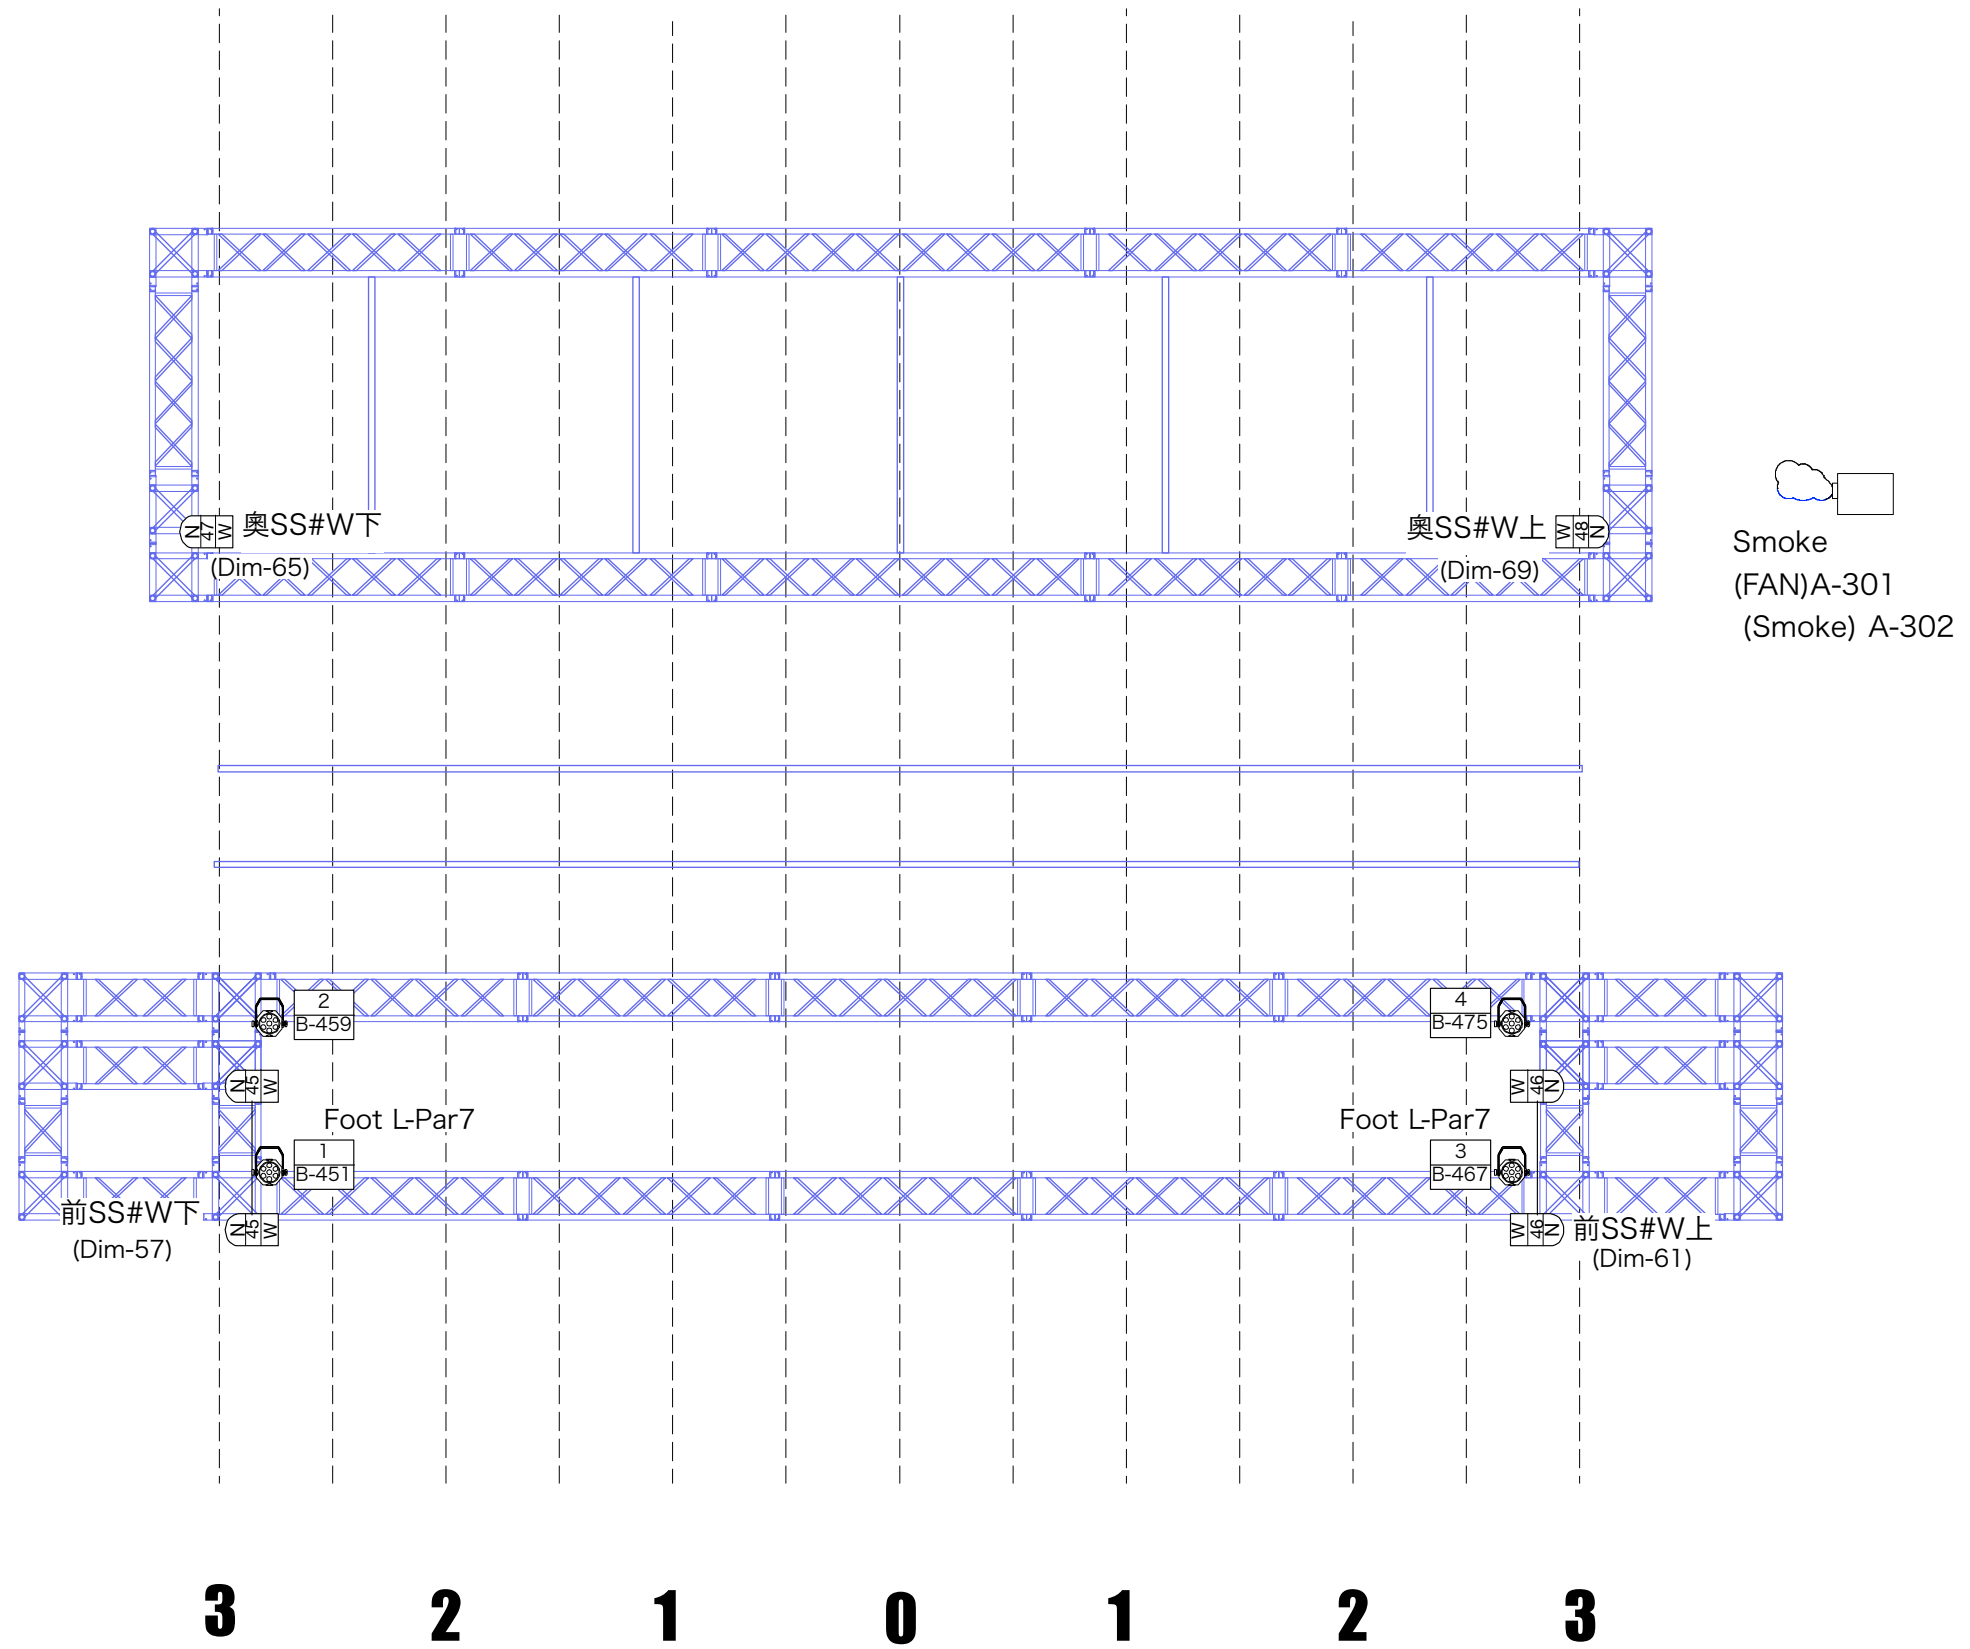

新宿BLAZE

2019年 1月23日 現在



Robin Spikie Mode-1 (27ch)
×8 (可動用なし)

Terbly L-Par-7 (8ch)
×4 (可動用なし)

PAR64
500W Nx53 (可動用なし)

PAR64
500W Mx22 (可動用x6)

PAR64
500W VN x26 (可動用x8)

FQ
500W x11 (可動用x3)
客電除く

2MOLE
300W x8 (可動用x4)

Source Four 436
750W x9 (可動用x3)

LED PARx20 (可動用x4)

可動用 LED
⑰363,⑱370,⑲377,⑳384

ストロボx6 (可動用x4)

可動用 ストロボ
③405,④407,⑤409,⑥411


Ayrton Diablo-S (客席)
(Standard add C-451)

ミラーボール

60A/No 100V/60A

D/No 200V/20A

4PN 4ポートノード

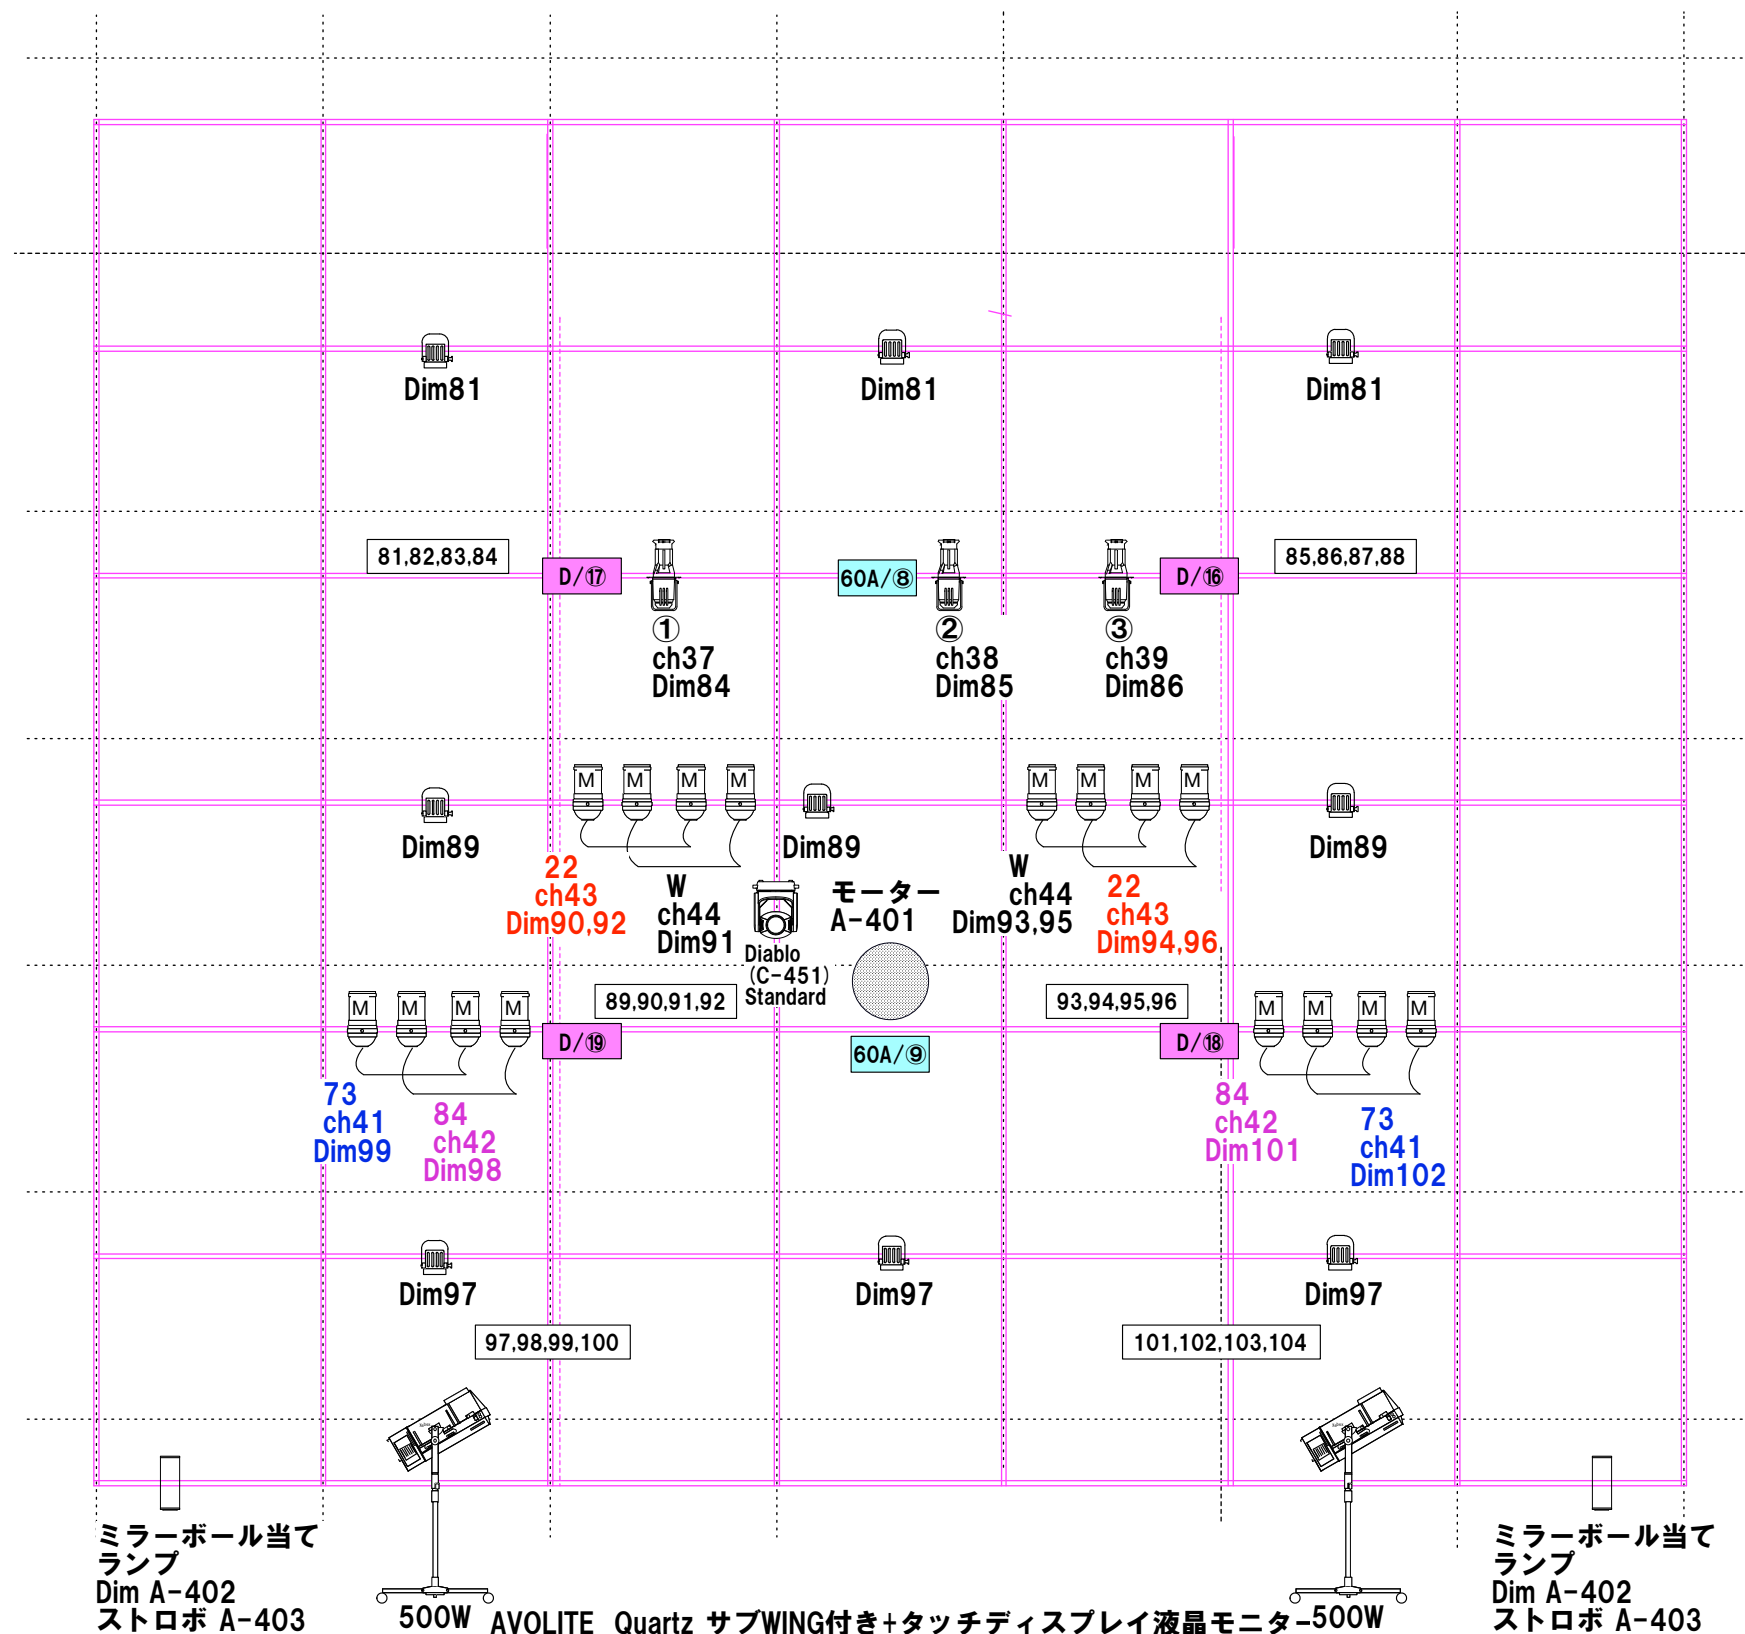

客席 空き回路

82,83,87,88
100,103,104

新宿BLAZE

2021年 10月2日 現在



Robin Spikie Mode-2 (27ch)
×8 (可動用なし)

 Terbly L-Par-7 (8ch)
×4 (可動用なし)

 PAR64
500W Nx61 (可動用x8)

 PAR64
500W Mx24 (可動用x8)

 PAR64
500W VN x16 (可動用x8)

 FQ
500W x11 (可動用x3)
客電除く

 2MOLE
300W x8 (可動用x4)

 Source Four 436
750W x9 (可動用x3)

 LED PARx20 (可動用x4)

可動用 LED
①7363,②370,③377,④384

 ストロボx6 (可動用x4)

可動用 ストロボ
③205,④207,⑤209,⑥211


 ミラーボール

 60A/No 100V/60A

 D/No 200V/20A


 4PN 4ポートノード

 球の種類
 Fader番号
 色

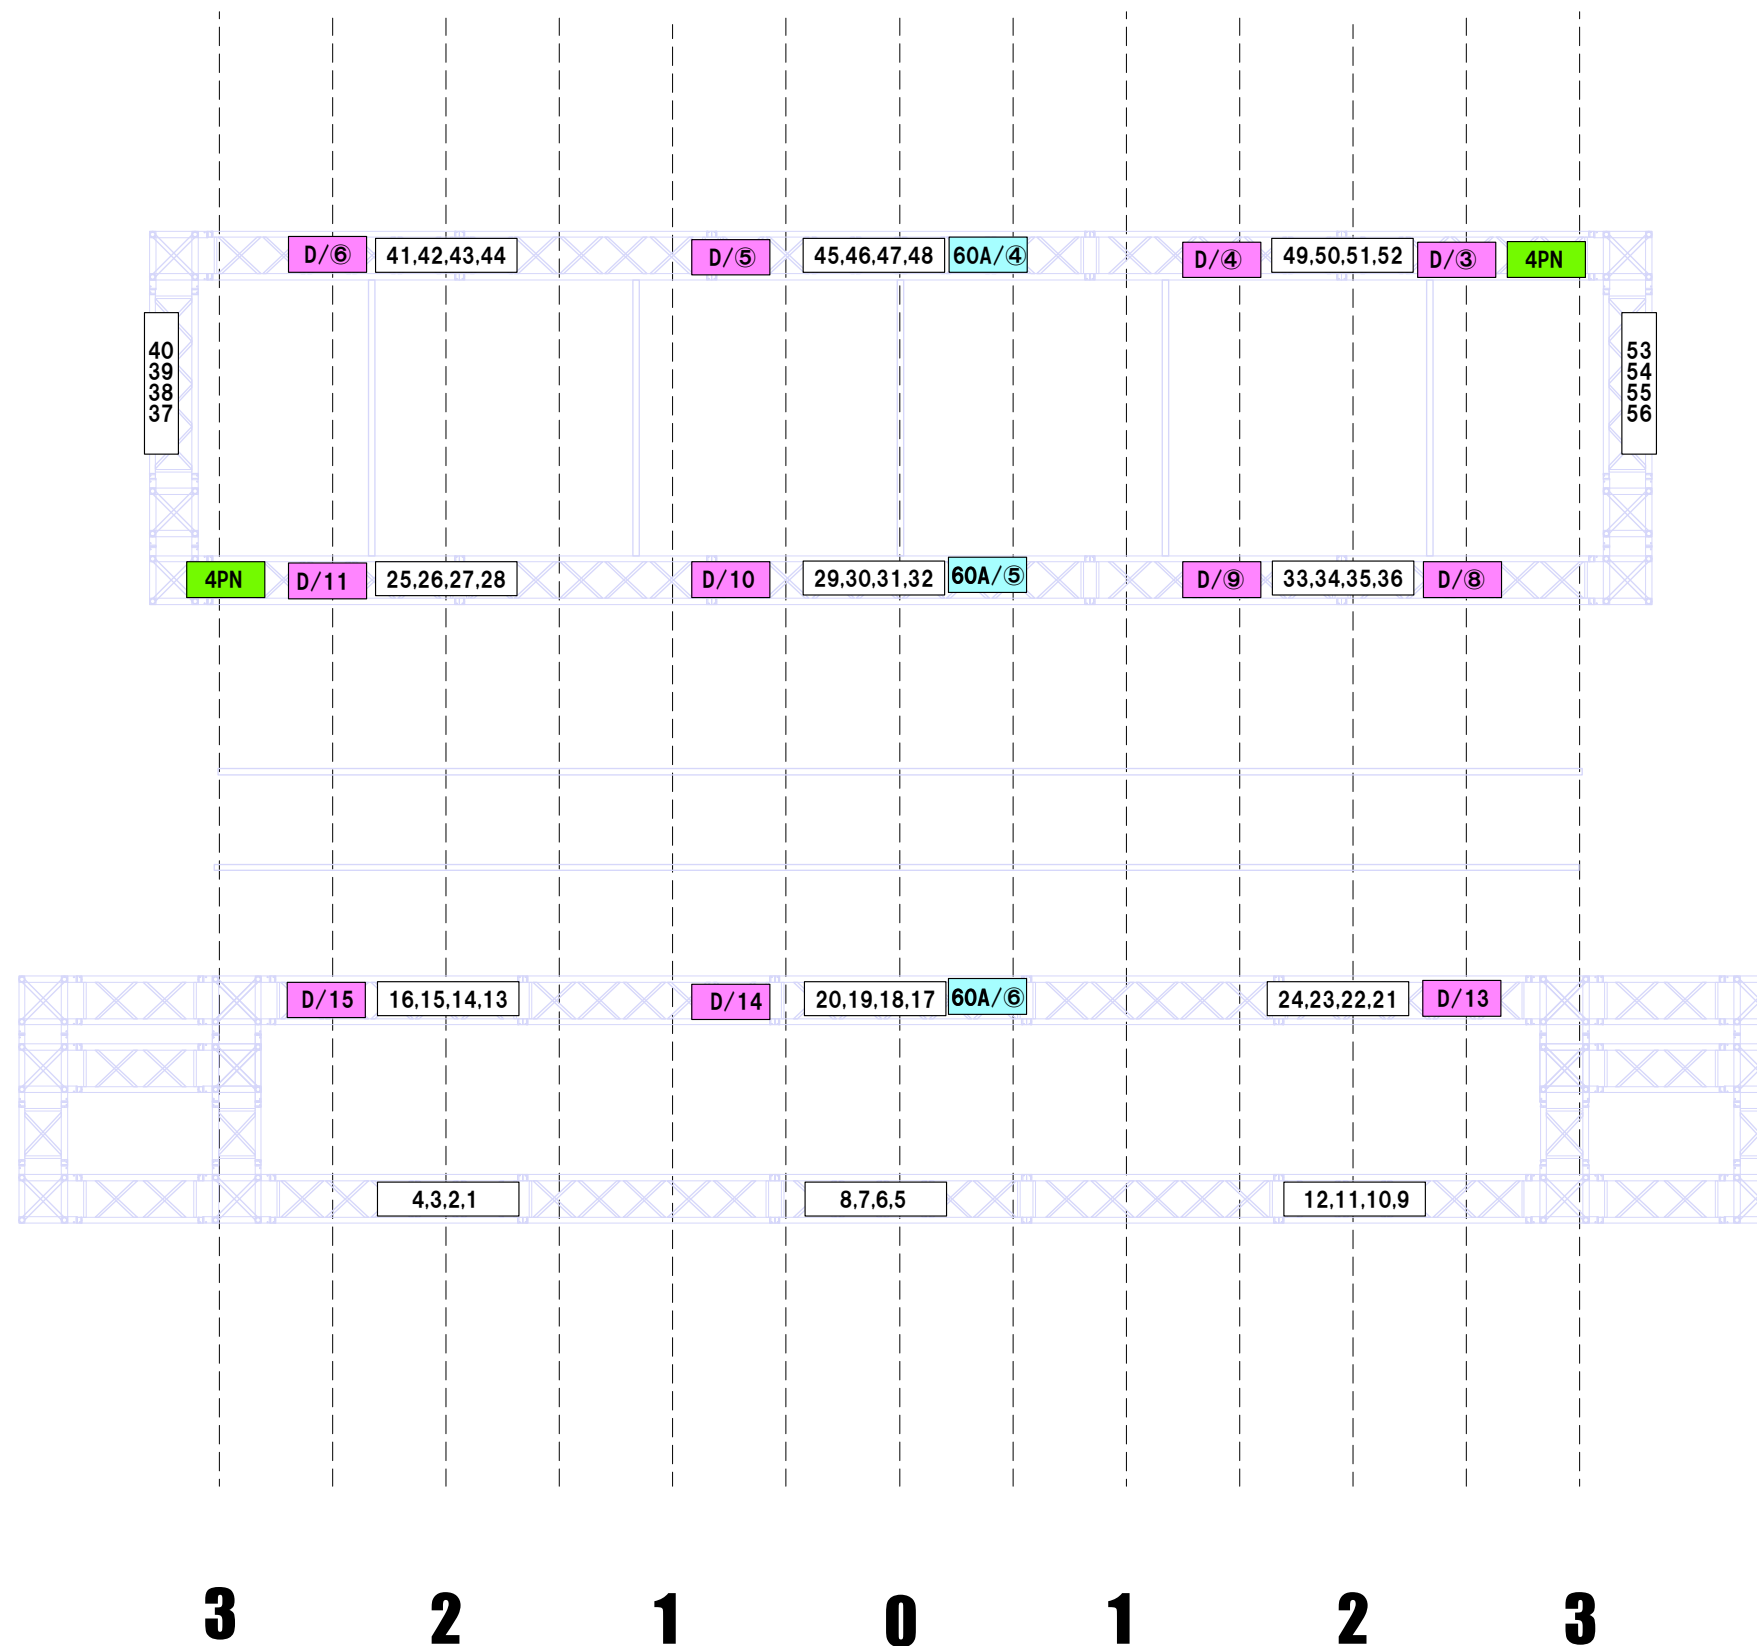

新宿BLAZE



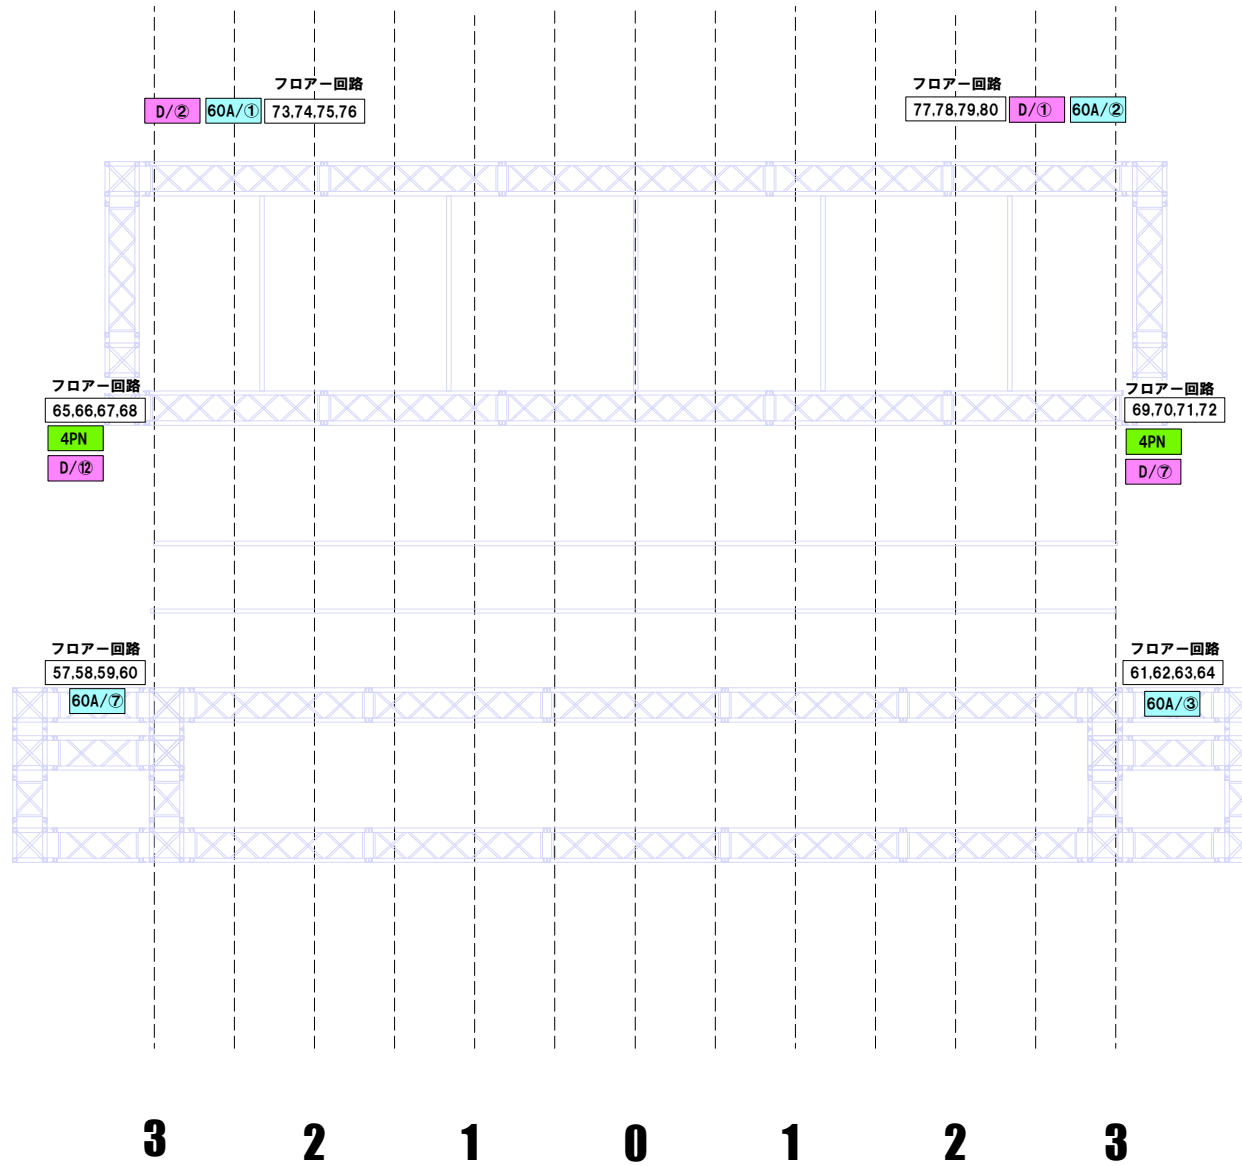

新宿BLAZE



1	2	3	4	5	6	7	8	9	10
86	#W			Side#W			#W		
◎	1	2	3	4	5	6	7	8	22
003/009	042	051	028	033	038	053	020	017	029
11	12	13	14	15	16	17	18	19	20
22			77						Side 77
2	3	4	1	2	3	4	5	6	下
032	025	036	045	048	026	035	016	021	037
21	22	23	24	25	26	27	28	29	30
Side#77	31				2MOLE				Wx1
上	1	2	3	4	1	2	3	4	
054	041	052	014	023	001	005	006	011	031
31	32	33	34	35	36	37	38	39	40
1	2	3	SF	4	5	6	CL SF	2	3
013	019	024	027	030	034	084	085	086	
41	42	43	44	45	46	47	48	49	50
CL		前SS#W		奥SS#W		縦吊り#22			
73	84	22	N/C	下	上	下	上	下	上
099/102	098/101	90/92/94/96	91/93/95	057	061	065	069	39	55
51	52	53	54	55	56	57	58	59	60
					MB	MB	work	smoke	house
					moter	lamp	light		light
					401	402/403	068/072	302	81/89/97
61	62	63	64	65	66	67	68	69	70
1	2	3	4	5	Spikie	6	7	8	
001	028	055	082	109	136	163	190		
71	72	73	74	75	76	77	78	79	80
1	2	3	Strobe	4	5	6	L Par-7		4
401	403	405	407	409	411	451	459	467	475
81	82	83	84	85	86	87	88	89	90
91	92	93	94	95	96	97	98	99	100
1	2	3	4	5	LED Par	6	7	8	9
251	258	265	272	279	286	293	300	307	314
101	102	103	104	105	106	107	108	109	110
11	12	13	14	15	LED Par	16	17	18	19
321	328	335	342	349	356	363	370	377	384
111	112	113	114	115	116	117	118	119	120
Diablo									
451									

FADER

1	2	3	4	5	6	7	8	9	10	
W [3Mix]	W	P	R	Am	L Am	Y	G	LG	C	
c	c	c	c	c	c	c	c	c		
11	12	13	14	15	16	17	18	19	20	
BG	LB	B	DB	Pu	M	Lv	L Lv	CTB	CTO	
c	c	c	c							
21	22	23	24	25	26	27	28	29	30	
Dim 0	Dim 30	Dim 50	Dim 70	Dim 100	Strobe Open	Sync Low	Sync High	Rnd Low	Rnd High	
Dim	Dim	Dim	Dim	Dim	シャッター	シャッター	シャッター	シャッター	シャッター	
31	32	33	34	35	36	37	38	39	40	
home	straight	cross	fan	vo	aud hi	aud low	aud Rnd	目潰し		
Position	Position	Position	Position	Position	Position	Position	Position	Position	Position	
41	42	43	44	45	46	47	48	49	50	
Effect OPEN	<<<<	<<<	<<	<	Rot Stop	>	>>	>>>	>>>>	
Effect	Effect	Effect	Effect	Effect	Effect	Effect	Effect	Effect	Effect	
51	52	53	54	55	56	57	58	59	60	
Prizm OPEN	<<<<	<<<	<<	<	Rot Stop	>	>>	>>>	>>>>	
Effect	Effect	Effect	Effect	Effect	Effect	Effect	Effect	Effect	Effect	
61	62	63	64	65	66	67	68	69	70	
Zoom Narrow	Zoom Normal	Zoom Wide					2700K	4500K	6300K	8000K
						Color	Color	Color	Color	
71	72	73	74	75	76	77	78	79	80	
ぐるぐる ALLStop	PAN <<<	PAN <<	PAN <	PAN Stop	PAN >	PAN >>	PAN >>>			
81	82	83	84	85	86	87	88	89	90	
TILT <<<	TILT <<	TILT <	TILT Stop	TILT >	TILT >>	TILT >>>				
group	group	group	group	group	group	group	group	group	group	
91	92	93	94	95	96	97	98	99	100	
Spikie all group	Spikie Rnd	Spikie odd	Spikie EVEN	Spikie 内～外	Spikie 奥～前				Strobe ALL	
101	102	103	104	105	106	107	108	109	110	
LED all group	LED Rnd	LED odd	LED Even	LED Even	LED SUS	LED Stage	柱 染め	LED 内～外	LED 奥～前	
111	112	113	114	115	116	117	118	119	120	

PALETTE

1	2	3	4	5	6	7	8	9	10
Dim 0	Dim 30	Dim 50	Dim 70	Dim 100	Strobe Open	Sync Low	Sync High	Rnd Low	Rnd High
Intensity	Intensity	Intensity	Intensity	Intensity	Intensity	Intensity	Intensity	Intensity	Intensity
11 Zoom ナロー	12 Zoom 25	13 Zoom ノーマル	14 Zoom 75	15 Zoom ワイド	16	17	18	19	20
Beam	Beam	Beam	Beam	Beam					
21 OPEN	22 	23 	24 	25 	26 	27 	28 	29 Scrl >>	30 Scrl >>>
Gobo	Gobo	Gobo	Gobo	Gobo	Gobo	Gobo	Gobo	Gobo	Gobo
31 ワイドゴボ シャープ	32 ワイドゴボ ソフト	33 ナローゴボ シャープ	34 ノーマルゴボ シャープ	35	36 Rotate STOP	37 Rorate >	38 Rorate >>	39 Rorate >>>	40 Rorate >>>>
Beam	Beam	Beam	Beam		Gobo	Gobo	Gobo	Gobo	Gobo
41 Prism アニメ OPEN	42 Prism STOP	43 Prism >	44 Prism >>	45 Prism >>>	46	47	48	49	50
Effect	Effect	Effect	Effect	Effect					
51 アニメーション シャープ	52 アニメーション ソフト	53 アニメーション ↓ >	54 アニメーション ↓ >>	55 アニメーション ↑ >	56 アニメーション ↑ >>	57	58	59	60
Beam	Beam	Effect	Effect	Effect	Effect				
61 羽 OPEN	62	63	64	65	66	67	68	69	70
Beam									
71 Vo.	72 ステージ	73 MB	74	75	76	77	78	79	80
Position	Position,Beam	Position,Beam							
81	82	83	84	85	86	87	88	89	90
W [3Mix]	W	P	R	Am	L Am	Y	G	LG	C
Color	Color	Color	Color	Color	Color	Color	Color	Color	Color
91	92	93	94	95	96	97	98	99	100
BG	LB	B	DB	Pu	Mg	Lv	L Lv	CTB	CTO
Color	Color	Color	Color	Color	Color	Color	Color	Color	Color
101	102	103	104	105	106	107	108	109	110
B.O.									
Color									
111 ホイール W	112 ホイール CTB	113 ホイール Mg	114 ホイール BLUE	115 ホイール GREEN	116 ホイール AMBER	117 ホイール L BLUE	118 ホイール RED	119	120
Color	Color	Color	Color	Color	Color	Color	Color		

PALETTE

Dimmer

Unit	Cir	CH	Name	Unit	Cir	CH	Name	Unit	Cir	CH	Name	Unit	Cir	CH	Name	Unit	Cir	CH	Name
1tr 下	1	26	2mole 下1	3tr 下	25	12	#22-3	4tr 上	49			ステージ下奥	73			客席下奥	97		
	2				26	16	#77-3		50				74				98	42	CL #84下
	3	1	#86 下×2		27	34	SF-4		51	3	#W-2		75				99	41	CL #73下
	4				28	4	#W-3		52	23	#31-2		76				100		
1tr 中	5	27	2mole 下2	3tr 中	29	10	#22-1	クロス 上	53	7	Side#W上	ステージ上奥	77			客席上奥	101	42	CL #84上
	6	28	2mole 上2		30	35	SF-5		54	21	Side#77上		78				102	41	CL #73上
	7				31	30	#W×1		55	50	縦吊り#22上		79				103		
	8				32	11	#20-2		56				80				104		
1tr 上	9	1	#86 下×2	3tr 上	33	5	#W-4	ステージ下前	57	45	前SS#W下	客席下前	81	60	客電(前1列)				
	10				34	36	SF-6		58				82						
	11	29	2mole 上1		35	17	#77-4		59				83						
	12				36	13	#22-4		60				84	49	CL/SF 下				
Unit	Cir	CH	Name	Unit	Cir	CH	Name	Unit	Cir	CH	Name	Unit	Cir	CH	Name				
2tr 下	13	31	SF-1	クロス 下	37	20	Side#77下	ステージ上前	61	46	前SS#W上	客席上前	85	50	CL/SF 中				
	14	24	#31-3		38	6	Side#W下		62				86	51	CL/SF 上				
	15				39	49	縦吊り#22下		63				87						
	16	18	#77-5		40				64				88						
2tr 中	17	9	#W-8	4tr 下	41	22	#31-1	ステージ下中	65	47	奥SS#W下	客席下中	89	60	客電(中1列)				
	18				42	2	#W-1		66				90	43	CL #22下1				
	19	32	SF-2		43				67				91	44	CL #W下				
	20	8	#W-7		44				68	58	作業灯 下		92	43	CL #22下2				
2tr 上	21	19	#77-6	4tr 中	45	14	#77-1	ステージ上中	69	48	奥SS#W上	客席上中	93	44	CL #W上2				
	22				46				70				94	43	CL #22上2				
	23	25	#31-4		47				71				95	44	CL #W上1				
	24	33	SF-3		48	15	#77-2		72	58	作業灯 上		96	43	CL #22上1				

直回路

Unit	Cir	Add	Name		Unit	Cir	Add	Name		Unit	Cir	Add	Name											
ステージ上奥	D-1				ステージ下奥	60AC-1				ステージ下前	60AC-7	402.403	MBあて											
ステージ下奥	D-2				ステージ上奥	60AC-2								客席前	60AC-8									
4tr 上1	D-3	190	Spikie-8		ステージ上前	60AC-3	402.403	MBあて		客席奥	60AC-9	402.403	MBあて											
4tr 上2	D-4											401	MB											
4tr 下2	D-5	163	Spikie-7		4tr	60AC-4						451	Diablo											
4tr 下1	D-6	136	Spikie-6					FOH			30AC													
ステージ上中	D-7										30AC													
3tr 上1	D-8										20AC													
3tr 上2	D-9	109	Spikie-5								20AC													
3tr 下2	D-10	82	Spikie-4								20AD													
3tr 下1	D-11	55	Spikie-3								20AD													
ステージ下中	D-12										20AD													
2tr 上	D-13	28	Spikie-2		3tr	60AC-5									20AD									
2tr 中	D-14														20AD									
2tr 下	D-15	1	Spikie-1		2tr	60AC-6									15A平	卓まわり								
客席上前	D-16														15A平									
客席下前	D-17														60AC		PIN×2							
客席上奥	D-18														60AC		映像用電源							
客席下奥	D-19																							